


WATER JET AND AIR JET OPERATION

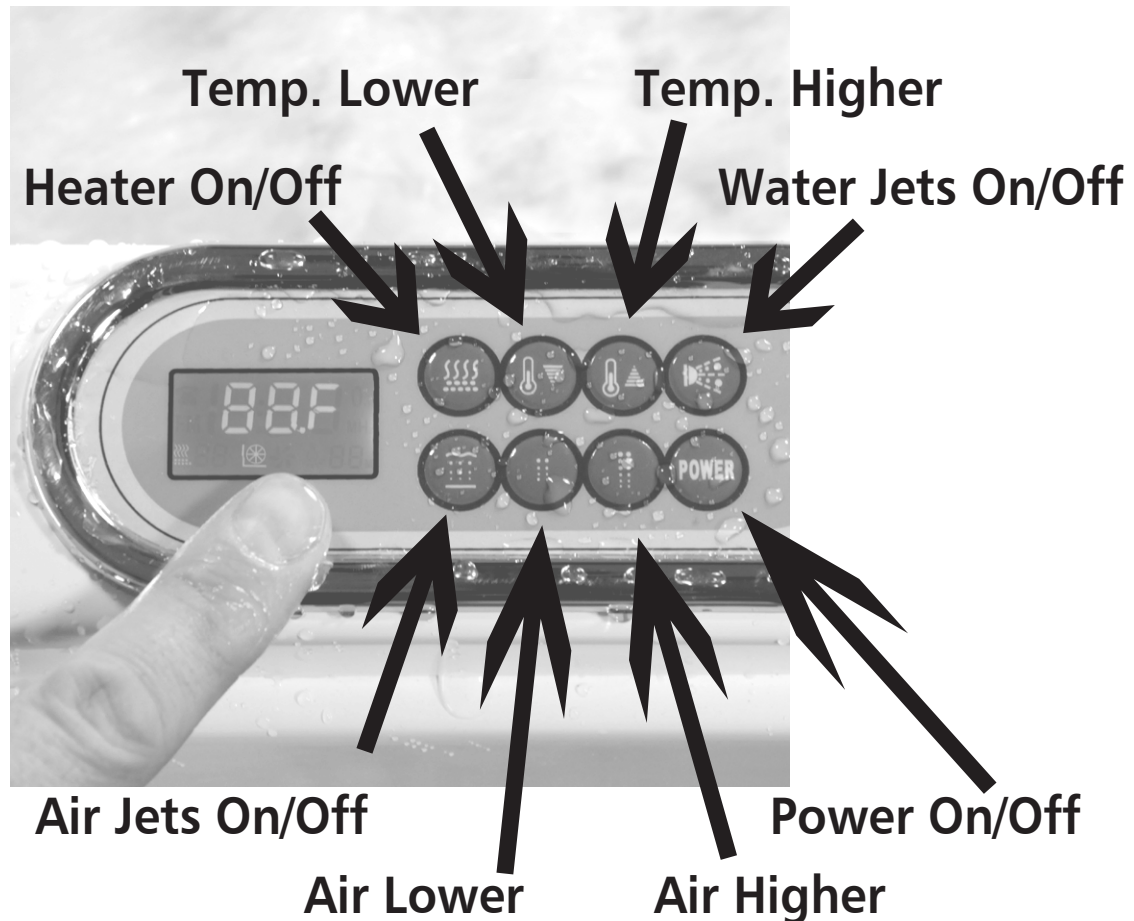

Water Jets

1. Fill tub enough to cover jets.
2. Press "Power" to turn on keypad.
3. Press "Water Jets On/Off" to turn on water jets.
4. When finished press "Water Jets On/Off" or "Power" to turn off water jets.

Heater

1. Fill tub enough to cover jets.
2. Turn on water jets (see above).
3. Press "Heater On/Off" to turn on heater, current temperature will display.
4. Press "Temp. Higher" or "Temp. Lower" to set temperature desired. Note: Heater will maintain current temperature or raise temperature 1-2° max.

Air Jets

1. Fill tub enough to cover jets.
2. Press "Power" to turn on keypad.
3. Press "Air Jets On/Off" to turn on water jets.
4. Press "Air Lower" or "Air Higher" to set speed of air blower motor.
5. When finished press "Air Jets On/Off" or "Power" to turn off air jets.